

**COBHAM**

# SAILOR 3965 Portable UHF ATEX SOLAS Fire Fighter

User manual



## Disposal

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimise any adverse impact of electronic equipment on the environment, both during the product lifetime and when it becomes waste. Within the European Union this legislation is mandated by Directive 2012/19/EU, and there is similar legislation in most other continents. The directive applies to all electronic products such as IT, household appliances, portable electronics etc., and imposes requirements to collect, treat, recover and recycle each product at its end of life. Electronic end-user products must also carry a WEEE label (as below) and recovery and recycling information has to be provided to the recycler.



This product contains traces of lithium in the battery pack. In addition it may contain lead and brominated flame retardants (BFRs), both in the housing material and circuit boards. In keeping with the directive, Thrane & Thrane A/S strongly recommends that this product and its battery pack be disposed of in a sensible and considerate manner. For example, do not simply discard the product in the domestic waste. Instead take it to a civil recycling facility, or contact Thrane & Thrane A/S for advice.

## Attention

Read important ATEX information in the following 9 pages.  
Additional important user information follows after page 9.

## ATEX marking for Radio type TT-3965A



Compliance with the Essential Health and Safety Requirements have been assured by compliance with:

EN IEC 60079-0:2018 and EN 60079-11:2012

See the ATEX EU-type Examination Certificate for additional information (a copy of the certificate is included in this user manual).

Operating ambient temperature -20°C to +55°C

## Putting TT-3965A into service

Unpacking of the radio and accessories and the removal of the protective film in front of the display must not take place in the ATEX protected area.

Do not use a mechanically damaged radio or battery inside hazardous area.

Always keep contacts on radio, battery and accessories dry and clean.

Do not change the battery in wet or humid environments.

Do not charge the battery in hazardous area.

For charge of battery use only:

Part no: 403505A – ATEX CH3505 Compact Charger,

Part no: 403507B – ATEX CH3507 Single Position Charger or

Part no: 403508B – ATEX CH3508 Dual Position Charger

Use only battery type SAILOR B3503, B3504, or B3906.

Charge the battery for approximately 24 hours the 1<sup>st</sup> time after prolonged storage to achieve maximum performance

Use only with TT-3965A ATEX approved accessories.

Alternatively ATEX approved accessories in compliance with the accessory connectors ATEX specification may be used.

## Use of TT-3965A

TT-3965A is a UHF radio designed for communication in ATEX areas in accordance with the ATEX approval.

TT-3965A is watertight according to the specification IP67.  
TT-3965A is designed for use among others on board ships, oilrigs etc.

These radios are typically used for communication between firefighters and the incident commander or between smoke divers.

Do not use a mechanically damaged radio or battery inside hazardous area.

Do not open the radio or battery. There isn't any serviceable parts inside.

Do not charge the battery in hazardous area.

Change of battery is allowed in hazardous area provided that radio and battery contacts are kept dry.

TT-3965A normally uses the rechargeable battery B3906. TT-3965A may alternatively be used with the non-rechargeable battery B3503. B3503 has a shelf life for up to 6 years.

## Assembling and dismantling of battery on TT-3965A

### Removing and inserting the battery pack

To **remove** the battery pack, do as follows:

1. Open the safety lock as shown.
2. Remove the battery.

To **insert** the battery pack, attach the battery and then close the safety lock

If the radio is not used for several weeks it is recommended to store the radio and battery separated to reduce self discharge of the battery.

Always keep the battery connector dry and clean.



## Assembling and dismantling of Accessories on TT-3965A top connector

Accessories are connected to the radio at the accessory connector on top of the radio.

### Mounting of accessories

Remove the connector cap.

Insert connector in radio and tighten the nut on the accessory connector by hand to exclude water.

### Disassembly of accessories

Unscrew the nut and remove the accessory connector.

Attach the connector cap to exclude water.

Always keep connectors dry and clean.

Use only with TT-3965A ATEX approved accessories.

Alternatively ATEX approved accessories in compliance with the accessory connector ATEX specification may be used.

### Accessory connector ATEX specification

Technical data:

Accessory interface connector in type of protection Intrinsic Safety

Ex ib IIB only for the connection to certified intrinsically safe circuits

Maximum values:  $U_o = 8.4 \text{ V}$   
 $I_o = 450 \text{ mA}$

Long-term output power  $P_o = 1.8 \text{ W}$  Rectangular characteristics  
 $C_o = 150 \text{ nF}$   
 $L_o = 10 \text{ }\mu\text{H}$

#### **ATEX approved accessories**

| <b>Item</b>   | <b>Item number</b> | <b>Description</b>                  |
|---------------|--------------------|-------------------------------------|
| Battery B3503 | 403503A            | ATEX Primary battery                |
| Battery B3504 | 403504A            | ATEX Secondary battery              |
| Battery B3906 | 403906A            | ATEX Secondary battery for TT-3965A |
| UHF Antenna   | 88-125662          | UHF Antenna                         |
| Lanyard       | 41-124375          | Lanyard                             |
| Belt clip     | 62-124320          | Belt clip                           |
| Leather case  | 403500-207         | Leather case                        |

#### **Accessories approved for use outside ATEX protection zone**

| <b>Item</b>    | <b>Item number</b> | <b>Description</b>                  |
|----------------|--------------------|-------------------------------------|
| Charger CH3505 | 403505A            | Single position compact charger     |
| Charger CH3507 | 403507B            | Single position charger with holder |
| Charger CH3508 | 403508B            | Dual position charger               |
| Service cable  | 403500-958         | Only for service use                |

## **Maintenance, overhaul and repair**

Always keep connectors dry and clean.

Recharge the battery regularly.

Change of battery is allowed in hazardous area provided that radio and battery contacts are kept dry.

No tools are needed for maintenance, overhaul and repair.

Do not open the radio or battery. The radio and battery are each sealed to exclude water.

There is no accessible user or service adjustments inside the radio or battery.

A defect radio or battery must be switched OFF and taken out of service immediately.

Accessories and spare parts are available see Approved accessories above.

## **Installation**

Always install chargers outside the ATEX protected area.

Do not charge the battery in hazardous area.

## **Adjustment**

Do not open the radio or battery. The radio and battery is sealed to exclude water.

There is no accessible user or service adjustments inside the radio and battery.

## **Training Instructions**

No special radio training is needed.  
ATEX safety is preserved independent of user settings on the radio.

## **Manufacturer**

Thrane & Thrane A/S      Lundtoftegaardsvej 93D, 2800 Kgs. Lyngby, Denmark

## Special Conditions for Safe Use

### *Safe use of ATEX equipment:*

- Do not change the battery in wet or humid environments.
- Always keep battery connectors dry and clean.
- Use only with SAILOR ATEX approved accessories.  
Alternatively ATEX approved accessories in compliance with the accessory connector ATEX specification may be used.
- Do not change accessories in wet or humid environments.
- Do not charge the battery in hazardous area.
- For charge of battery use  
Part no: 403505A – ATEX CH3505 Compact Charger,  
Part no: 403507B – ATEX CH3507 Single Position Charger or  
Part no: 403508B – ATEX CH3508 Dual Charger.
- Use only battery type SAILOR B3503, B3504 or B3906.
- Do not use a mechanically damaged radio.
- Unpacking of the radio and accessories and the removal of the protective film in front of the display window must not take place in the ATEX protected area.



## SAILOR 3965 ATEX UHF Fire

**Document number:** 98-150078-K

**Release date:** December 13, 2021

**Copyright:** © 2021 Thrane & Thrane A/S. All rights reserved.

### Trademark Acknowledgements

- **SAILOR** is a registered trademark of Thrane & Thrane A/S.
- **Other product and company names** mentioned in this manual may be trademarks or trade names of their respective owners.

### Warranty limitation

IMPORTANT - The radio and batteries are sealed waterproof units. To create and maintain the waterproof integrity they are assembled in a controlled environment using special equipment. The radio and batteries are not user maintainable units, and the units must under no circumstances be opened except by authorized personnel. Unauthorized opening of the units will invalidate the warranty.

### Disclaimer

Any responsibility or liability for loss or damage in connection with the use of this product and the accompanying documentation is disclaimed by Thrane & Thrane A/S. The information in this manual is provided for information purposes only, is subject to change without notice and may contain errors or inaccuracies. Manuals issued by Thrane & Thrane A/S are periodically revised and updated. Anyone relying on this information should acquire the most current version e.g. from [www.cobhamsatcom.com](http://www.cobhamsatcom.com), Cobham SYNC Partner Portal, or from the distributor. Thrane & Thrane A/S is not responsible for the content or accuracy of any translations or reproductions, in whole or in part, of this manual from any other source. In the event of any discrepancies, the English version shall be the governing text.

Thrane & Thrane A/S is trading as Cobham SATCOM.

## Precautions

Avoid water and salt in the I/O connector and keep it clean frequently.

Only use original Thrane & Thrane battery packs. Make sure they are clean and dry before attaching the transceiver. Be careful not to damage any gaskets.

Only use the original Thrane & Thrane charger for the rechargeable battery.

Be very careful when handling the Lithium batteries. With correct use they are safe but any misuse might cause dangerous situations.

Never short circuit the battery terminals, never expose the transceiver and the batteries to extreme temperature or fire and never use any kind of violence.

Avoid close contact between the antenna and parts of the human body. The top of the antenna must never be closer than 2.5 cm to the body when transmitting.

Do not submerge the transceiver more than 1 m for 30 minutes.

Keep the transceiver at least 0.3 m away from the magnetic compass.

### **RF exposure and safety**

The SAILOR 3965 ATEX UHF Fire is designed for *occupational use only* and is also classified as such. It must be operated by licensed personnel only and thus NOT intended for use in an uncontrolled environment by general public.

The SAILOR 3965 ATEX UHF Fire must only be used in the course of employment by individuals aware of the radiation hazards as well as the way to minimize those.

This radio complies with the limits for occupational/controlled RF exposure environment at operating duty factors of up to 50% transmitting and is authorized for occupational use only.

To control your exposure and ensure compliance with the occupational/controlled environment exposure limits always adhere to the following procedures.

- User awareness instructions should accompany device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.

The SAILOR 3965 ATEX UHF Fire complies with the limits for occupational/controlled exposure in the following SAR specifications:

- IEEE 1528-2013
- FCC CFR 47 § 2.1093
- RSS-102 Issue 5

### **Training Requirement**

Operating personnel shall have completed an RF safety program including specific training and education regarding RF radiation hazards in the use of the equipment.

Please refer to the following websites for more information on what RF energy exposure is and how to control your exposure to assure compliance with established RF exposure limits.

<https://www.fcc.gov/engineering-technology/electromagnetic-compatibility-division/radio-frequency-safety/faq/rf-safety>

[http://www.ic.gc.ca/eic/site/ceb-bhst.nsf/eng/h\\_tt00084.html](http://www.ic.gc.ca/eic/site/ceb-bhst.nsf/eng/h_tt00084.html)

### **Operating instruction**

Follow these general rules of operation for safe operation and to reduce the RF exposed energy:

- Transmit no more than the rated duty factor of 50% of the time.
- Hold the radio in a vertical position in front of face with the microphone (and the other parts of the radio, including the antenna) at least one inch (2.5 cm) away from the head. Keeping the radio at the proper distance is important because RF exposures decrease with distance from the antenna.
- When worn on the body, always place the radio with an approved belt clip or case. Using approved body-worn accessories is important because the use of other manufacturer's non-approved accessories may result in exposure levels, which exceed the occupational/controlled environment RF exposure limits.
- Use only manufacturer's name approved supplied or replacement antennas, batteries, and accessories. Use of non-manufacturer-name approved antennas, batteries, and accessories may exceed the exposure guidelines.
- For best radio performance, hold the radio vertically and 5 cm away from the head when talking into the microphone.

### **Channel programming**

SAILOR 3965 ATEX UHF Fire is from manufacturer programmed with the international channels for on-board vessel communication. For alternative configuration of the radio contact a general agent.

## Précautions d'emploi

Évitez tout contact du connecteur E/S avec du sel ou de l'eau et veillez à ce qu'il reste propre et sec.

Utilisez uniquement des batteries d'origine Thrane & Thrane. Assurez-vous qu'elles sont bien propres et sèches avant de les raccorder à l'émetteur-récepteur.

Veillez à n'endommager aucun joint.

Utilisez uniquement le chargeur Thrane & Thrane d'origine pour recharger la batterie.

Soyez très prudent lorsque vous manipulez les batteries au lithium.

Elles sont sûres si elles sont utilisées correctement mais peuvent causer des situations dangereuses en cas d'utilisation non conforme.

Ne court-circuitez pas les bornes de la batterie. N'exposez ni l'émetteur-récepteur ni les batteries à des températures extrêmes ou aux flammes.

Veuillez prêter attention à l'exposition aux radiofréquences (RF). Lisez les sections *RF exposure and safety* on page iii, *Training Requirement* on page iii et *Operating instruction* on page iv avant d'utiliser cette radio.

N'immergez pas l'émetteur-récepteur à plus de 1 m de profondeur et pendant plus de 30 minutes. Tenez l'émetteur-récepteur à une distance minimale de 0,3 m d'une boussole magnétique.

### **Expositions aux RF et sécurité**

Le SAILOR 3965 ATEX UHF Fire est conçu *uniquement pour une utilisation professionnelle* et est classifié en tant que tel. Il doit être manipulé par du personnel autorisé et n'est PAS prévu pour une utilisation par le grand public dans un environnement non contrôlé.

Le SAILOR 3965 doit uniquement être utilisé dans le cadre professionnel par des individus conscients des dangers des rayonnements ainsi que des façons de les minimiser.

Cette radio est conforme aux limites pour un environnement d'exposition RF contrôlé/professionnel à des facteurs d'utilisation pouvant atteindre 50 % de transmission et elle est autorisée uniquement pour un usage professionnel.

Pour contrôler votre exposition et assurer le respect des limites d'exposition dans un environnement professionnel/contrôlé, respectez toujours les procédures suivantes.

- Les instructions destinées à l'utilisateur doivent être conservées avec l'appareil et être transmises aux autres utilisateurs.
- N'utilisez pas l'appareil si les exigences opérationnelles décrites ici ne sont pas respectées.

Le SAILOR 3965 est conforme aux limites d'exposition professionnelle/contrôlée dans le cadre des spécifications SAR suivantes :

- IEEE 1528-2013
- FCC CFR 47 § 2.1093
- RSS-102 Issue 5

### **Exigences de formation**

Le personnel utilisant l'appareil doit avoir suivi un programme de sécurité sur les radiofréquences, y compris une formation spécifique et disposer de connaissances concernant les dangers de l'exposition aux RF lors de l'utilisation de l'équipement.

Veillez-vous reporter aux sites Internet suivants pour de plus amples informations sur l'exposition à l'énergie des RF et comment contrôler votre exposition pour respecter les limites d'exposition RF définies.

<https://www.fcc.gov/engineering-technology/electromagnetic-compatibility-division/radio-frequency-safety/faq/rf-safety>

[http://www.ic.gc.ca/eic/site/ceb-bhst.nsf/eng/h\\_tt00084.html](http://www.ic.gc.ca/eic/site/ceb-bhst.nsf/eng/h_tt00084.html)

### **Instructions d'utilisation**

Respectez les règles générales suivantes pour une utilisation sécurisée, ainsi que pour réduire l'exposition aux RF :

- Ne transmettez pas à un facteur d'utilisation supérieur à 50 %.
- Tenez la radio en position verticale en face du microphone (ainsi que les autres parties de la radio, y compris l'antenne) à au moins 2,5 cm de distance de votre tête. Il est important de maintenir la radio à la bonne distance car l'exposition au RF décroît lorsque la distance par rapport à l'antenne augmente.
- Si vous la transportez sur vous, placez toujours la radio dans un clip de ceinture ou un étui approprié. Il est important d'utiliser des accessoires de transport approuvés car l'utilisation d'accessoires non approuvés provenant d'autres fabricants peut entraîner des niveaux d'exposition qui dépassent les limites d'exposition RF dans un environnement contrôlé/professionnel.
- Utilisez uniquement des accessoires, batteries et antennes de rechange fournis ou approuvés par le fabricant. L'utilisation d'accessoires, de batteries et d'antennes non approuvés par le fabricant peut entraîner le dépassement des limites d'exposition.
- Pour de meilleures performances radio, tenez la radio verticalement et à 5 cm de votre tête lorsque vous parlez dans le microphone.

### **Programmation des canaux**

SAILOR 3965 Fire est un fabricant programmé avec des canaux internationaux pour la communication à bord des navires. Pour une configuration alternative de la radio, contactez un agent général.

## Contents

---

### Chapter 1 Introduction

|                                                  |          |
|--------------------------------------------------|----------|
| <b>Your ATEX UHF Fire .....</b>                  | <b>1</b> |
| Compliance with Marine Equipment Directive ..... | 2        |
| Performance .....                                | 2        |
| <b>Channels .....</b>                            | <b>2</b> |

### Chapter 2 Operation

|                              |           |
|------------------------------|-----------|
| <b>Controls .....</b>        | <b>5</b>  |
| Keys and buttons .....       | 5         |
| The display .....            | 7         |
| Using the ATEX UHF .....     | 8         |
| Basic functions .....        | 8         |
| <b>Other functions .....</b> | <b>11</b> |

### Chapter 3 Batteries

|                              |    |
|------------------------------|----|
| Battery types .....          | 15 |
| The primary battery .....    | 15 |
| The secondary battery .....  | 16 |
| The battery chargers .....   | 17 |
| Installing the charger ..... | 17 |
| Recharging the battery ..... | 18 |

### Chapter 4 Configuring the radio

|                                             |           |
|---------------------------------------------|-----------|
| <b>Configuration mode .....</b>             | <b>19</b> |
| Entering and using configuration mode ..... | 19        |
| List of configuration settings .....        | 20        |

---

## **Chapter 5 Equipment and accessories**

|                                            |           |
|--------------------------------------------|-----------|
| <b>External equipment .....</b>            | <b>27</b> |
| List of equipment .....                    | 27        |
| Connecting external equipment .....        | 28        |
| Impact on radio operation .....            | 29        |
| Accessorie connector .....                 | 29        |
| <b>Accessories .....</b>                   | <b>30</b> |
| List of accessories .....                  | 30        |
| Attaching and removing the belt clip ..... | 32        |

## **Chapter 6 Troubleshooting**

|                         |    |
|-------------------------|----|
| Displaying errors ..... | 33 |
|-------------------------|----|

## **App. A Technical specifications**

|                                               |           |
|-----------------------------------------------|-----------|
| <b>Technical data SAILOR 3965 .....</b>       | <b>35</b> |
| General .....                                 | 35        |
| Transmitter .....                             | 36        |
| Receiver .....                                | 36        |
| <b>Battery life guidelines .....</b>          | <b>37</b> |
| Primary battery (non-rechargeable) .....      | 37        |
| Secondary battery (rechargeable) .....        | 37        |
| <b>Dimensional drawing, transceiver .....</b> | <b>38</b> |
| <b>Dimensional drawing, charger .....</b>     | <b>39</b> |
| <b>Declaration of Conformity .....</b>        | <b>41</b> |

## **App. B Attention**

|                                |           |
|--------------------------------|-----------|
| <b>Gore-tex Membrane .....</b> | <b>47</b> |
|--------------------------------|-----------|

### ***Introduction***

#### **Your ATEX UHF Fire**

The ATEX UHF Fire is designed for flexibility in daily use. It connects easily to external equipment like headsets and fist mikes, making the SAILOR 3965 suitable for any noisy environment.

Main features:

- Unique man machine interface, an excellent grip even with gloves, and large tactile buttons.
- Display with red adjustable backlight which makes the display visible even at night.
- Built-in “sleep” function, minimizing power consumption and improving battery lifetime.
- Scrambling function for privacy calls.
- CTCSS function for selective opening of Squelch.
- Channel read-out function for audible feedback of channel name in headset upon channel change
- A lanyard and belt clip included.



## **Compliance with Marine Equipment Directive**

For compliance with Marine Equipment Directive 2014/90/EU - specifically IEC/EN 60945, 8.4.2 - use only primary battery B3503. Except for the reduced capacity in low temperature due to the used lithium-ion technology, the secondary batteries B3906 and B3504 secures compliance with all applicable standards.

## **Performance**

For best performance of the transceiver keep the following in mind:

- Keep clear of metal environment.
- Hold the transceiver vertically and 5 cm from lips and push the PTT when transmitting.
- In receive mode carry the transceiver vertically with belt clips.
- To preserve battery power, adjust squelch to close the loudspeaker when there is no signal.
- If you are in a lifeboat keep the antenna as high as possible.

## **Channels**

channels according to ITU-R M.1174-3 specifying the international channels for on-board vessel communication. For alternative configuration of the radio contact a general agent.

Table 1: Simplex frequencies (25 kHz )

| Channel designator<br>(preprogrammed) | Recommendation ITU-R<br>M.1174-3 | Frequency   |
|---------------------------------------|----------------------------------|-------------|
| A                                     | 4                                | 467.525 MHz |
| B                                     | 5                                | 467.550 MHz |
| C                                     | 6                                | 467.575 MHz |
| D                                     | 1                                | 457.525 MHz |
| E                                     | 2                                | 457.550 MHz |
| F                                     | 3                                | 457.575 MHz |

Table 2: Duplex frequencies for use with repeaters only (25 kHz)

| Channel designator<br>(preprogrammed) | Repeater RX Frequency | Repeater TX Frequency |
|---------------------------------------|-----------------------|-----------------------|
| G                                     | 467.525 MHz           | 457.525 MHz           |
| H                                     | 467.550 MHz           | 457.550 MHz           |
| J                                     | 467.575 MHz           | 457.575 MHz           |
| K                                     | 467.5375 MHz          | 457.5375 MHz          |
| L                                     | 467.5625 MHz          | 457.5625 MHz          |

The channel designators are defaulted to the letter formats “A” (25 kHz frequency separation). Any additional explanatory naming can be added (see *ADD NAME* in *Chapter 4 Configuring the radio* on page 19).

If no dedicated naming is applicable users are encouraged to add complimentary channel names as defined in table 2 and 3 (Recommendation ITU-R M.1174-3).




### Operation

#### Controls

##### Keys and buttons

1. On/off/volume
2. Light/Lock
3. Push To Talk (PTT)
4. Up key
5. Down key
6. Hi/Lo output power
7. Squelch
8. Scan
9. D/P0 quick channel select
10. Loudspeaker/microphone

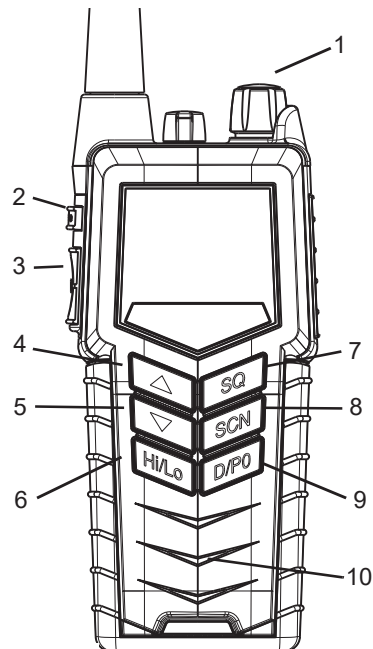


### Key presses

Pressing and holding certain keys gives access to additional functions, shown in the table below.

| Key                                                                                                                                                                    | Short press<br>(1 beep)                                                          | Long press<br>(2 beeps)                                                                                                                                                                                                                            | Extra long<br>press<br>(3 beeps)                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| <br> | Show next available item in the list (up or down).<br>Default: Channel selection | Run through available items, <b>or</b> select tagged channels P1 (  ) or P2 (  ) | Run through available items if an P1 or P2 channel is tagged |
|                                                                                     | Activate Squelch control (Adjust with up/down arrows).                           | Monitor function. Open Squelch completely. Set period of time in configuration mode.                                                                                                                                                               |                                                              |
|                                                                                     | 1 press: Activate/terminate Dual watch.<br>2 presses: Activate memory scan.      | Add/Delete channel from memory scan.                                                                                                                                                                                                               |                                                              |
|                                                                                     | Toggle between high and low transmitter power.                                   |                                                                                                                                                                                                                                                    |                                                              |
|                                                                                     | Select channel D.                                                                | Select preprogrammed channel P0.                                                                                                                                                                                                                   |                                                              |

## The display

The display holds various fields of information, explained below.

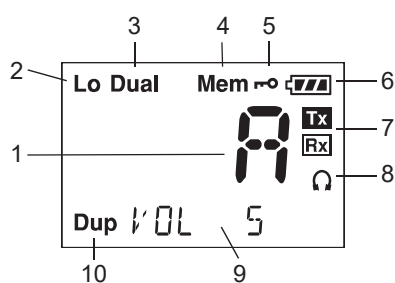

1. Current working channel.
2. "Lo": Reduced transmitter power.  
Full transmitter power is not shown in display.
3. Dual watch activated.
4. Current working channel is marked for scanning.
5. Keypad is locked.
6. Battery level indicator.
7. Transmitting (TX) /Receiving (RX).
8. Accessory is connected.
9. Service line for various purposes. In this example the volume level.
10. Semi-duplex channel.

## Using the ATEX UHF

### Basic functions

**Note** Before using the radio, mount the antenna at the top of the radio. The antenna is delivered with the radio.

#### *Switching the radio on and off*

- To **switch the radio on**, turn the knob at the top of the radio **clockwise**.  
The display lights up showing the last used channel and the battery level.
- To **switch the radio off**, Turn the knob back **counter-clockwise** until it clicks.



#### *Selecting the working channel*

- To select **channel D**, press the **D/P0** key.
- To select among **all available channels**, press ▲ or ▼ on the keypad. For fast selection, press and hold ▲ or ▼.

The display shows the currently selected channel. The bottom left corner of the display shows “Dup” if the channel is a semi-duplex channel.

**Note** Long press on ▲ or ▼ can also be used to select preferred channels. For information on how to program preferred channels, see *Configuring the radio* on page 19.

### ***Activating a call***

To **activate a call** to the selected channel, press and hold the **PTT** button on the side of the radio.

The radio transmits as long as the PTT button is pressed. A small **TX** sign next to the channel number indicates when the radio is in transmit mode.



### ***Adjusting the volume***

- To **increase** the volume, turn the on/off knob at the top of the radio **clockwise**.
- To **decrease** the volume, turn the knob **counter-clockwise**.

The display shows the level of the volume, e.g. "VOL 5", while it is adjusted.

### ***Using Squelch control***

- To **activate** Squelch control, press the **SQ** key.
- To **set** the Squelch level, press ▲ (closing) or ▼ (opening). The display shows the Squelch level while it is adjusted, e.g. "SQ 5".

### ***Adjusting the display backlight***

- To **turn on** the backlight, press the **Light/Lock** button on the side of the radio.
- To **adjust** the backlight level, press ▲ or ▼ within 3 seconds after turning on the light. The display shows the level while it is adjusted, e.g. "DIM MED".



### ***Using Dual watch (requires priority channel is programmed)***

- **To activate** Dual watch, press the **SCN** key.  
The display shows “Dual” at the top and “D” at the bottom right.  
The radio toggles between the selected channel and channel D (if channel D is programmed as the priority channel).
- **To terminate** Dual watch, press **SCN** again.

### ***Scanning channels***

- **To activate** scanning memory, press 2 times **SCN** within 1/2 a second.  
During scanning, the display shows “SC” in the channel field. The radio toggles between channel D and each of the channels are marked for scanning (only if a priority channel, e.g. D was programmed).
- **To terminate** scanning, press **SCN** once.

### ***Changing the transmitter power***

**To change** the transmitter power, press the **Hi/Lo** key. The display shows “Lo” when power is set to low. Otherwise maximum power is used.

### ***Locking the keypad***

- **To lock** the keypad, press and hold the **Light/Lock** button. The display shows a key symbol when the keypad is locked.
- **To unlock** the keypad, press and hold the **Light/Lock** button again.

## Other functions

### ***Programming the scanning memory***

**To add** a channel to the scanning memory, select the channel and then press and hold the **SCN** key until the display shows **MEM** at the top.

**To remove** a channel from the scanning memory, select the channel and then press and hold the **SCN** key until the **MEM** sign disappears from the display.

### ***Low power operation***

The radio can be operated in low power mode. In this mode battery life time is dramatically increased. Up to the first second of a received call might be lost if this mode is selected. Refer to *SLEEP* on page 20.

### ***Continuous Tone Coded Squelch System***

Selective squelch opening by sub-tone detection (CTCSS) can be enabled, using the configuration mode (see *CTCSS* on page 23). Please note that if the radio is operating with CTCSS on a channel, and a carrier is received, it may not be recognized in the loud speaker if the matching sub-tone is not detected. For this reason, be very careful not to use CTCSS programmed channels in emergency situations. For the same reason transmitting is prohibited (reporting "BUSY") if a (silent) carrier containing any sub-tone is active on the channel while pressing PTT.

Channels programmed with CTCSS will have a clear identification in the service field, e.g. "CTCSS 22", while selected. Not all channels are allowed for CTCSS use.

For maritime channels CTCSS is automatically disabled when

- Product is turned off
- A new channel is selected

For private channels, the feature will remain until manually removed.

### **Scrambler**

On channels where it is allowed, you can set up voice scrambling, using configuration mode (see *SCRM* on page 24).

Please note that if the radio is operating with scrambling on a channel, it is impossible to communicate with other radios that are not programmed with the same scrambler code. For this reason, be very careful **not** to use scrambled channels in emergency situations. Scrambled channels will have a clear identification in the service field, e.g. "SCRM 3", while selected. Not all regions allow the use of voice scrambling.

For maritime channels scrambling is automatically disabled when

- Product is turned off
- A new channel is selected

For private channels, scrambling will remain until manually removed.

#### **Note**

Prior to any initiation of scrambling, the operator must always identify the calling station in clear voice (unscrambled) on that channel. Use of scrambling may also be restricted by national laws.

### **Narrow band operation**

The radio is prepared for narrow band operation. (see *BAND* on page 24).

Narrow band configuration is indicated with an "n" next to the channel designator.

---

**Alive beep**

To enable “ALIVE” function do as follows:

1. Select the channel where ALIVE function is desired to be transmitted.
2. Press and hold the **Hi/Lo** until you see “ALIVE ON” on the radio display. It takes approx. a second.
3. Now “ALIVE” is transmitted by a “beep” on the working channel, with approx. 4-second intervals.

To deactivate “ALIVE” function do as follows:

- Press and hold the **Hi/Lo** pressed until “ALIVE ON” no longer appears on the radio display. It takes approx. a second.

“ALIVE” function is also deactivated when

- The channel is changed.
- The radio is turned OFF and ON again.
- Watch or scanning is enabled.
- Squelch is open.

Refer to *ALIVE* on page 24

**Channel read-out**

In some use cases the display is not directly visible to the user (e.g. if the radio is used in a belt or pocket). Consequently, when changing to a new channel (using the Up and Down buttons) the user cannot positively know which channel is now the current one.

The channel read-out feature, however, enables users to get audible feedback on channel name in a connected headset (or speaker-mike)

## Operation

---

upon channel change (the name of the new channel will be announced in the headset).

Please note that this feature is disabled as default and can be enabled either through the Portable Radio Service Tool or the menu settings in the radio (see chapter 4 for more information).

Please also note that this feature requires external equipment with a speaker, hence, although the feature is enabled the new channel will not be announced in the speaker of the radio.

Please also note that if the Monitor function is enabled, the new channel will not be announced in the speaker of the radio or the head-set although the channel read-out feature is enabled and a head-set is connected.

## Batteries

### Battery types

- The ORANGE (B3503) primary battery pack contains a non-rechargeable Lithium battery. This battery pack is to be used in case of emergency and to ensure compliance with MED 2014/90/EU.
- The RED (B3906) or BLUE (B3504) secondary battery pack contains a rechargeable battery. These battery packs can be used in conditions where MED 2019/90/EU is not applicable.

### The primary battery

**Important** The orange (B3503) primary battery pack is only for emergency use, and is **not** rechargeable.

Before using the primary battery, remove the seal on the battery pack. Then do as follows:

1. Attach the battery pack to the radio as shown.
2. Lock the battery with the safety lock at the bottom.

The primary battery is capable of providing sufficient power for 8 hours of operation defined as 10% Tx, 10% Rx and 80% standby. When the primary pack is not in use it must always be placed in the dedicated rear position in the charger cradle, see *The battery chargers* on page 17.

2005



## The secondary battery

### ***Removing and inserting the battery pack***

**To remove** the battery pack, do as follows:

1. Open the safety lock as shown.
2. Remove the battery.

**To insert** the battery pack, attach the battery and then close the safety lock.


If the radio is not used for several weeks it is recommended to store the radio and battery separated to reduce self discharge of the battery.



### ***Battery level indication***

When the battery level is low, you should recharge the battery.

The radio display shows the battery status. When the battery symbol is empty and flashing, the battery should be recharged as soon as possible.

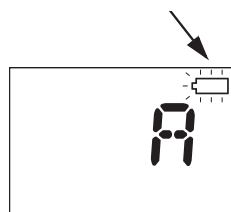

## The battery chargers

The chargers has two compartments.

### CH3505

- A compartment for recharging the battery alone or while attached to the radio.

### CH3507

- A rear compartment only for storing a spare battery. It does not have a charger function.
- A front compartment for recharging the battery alone or while attached to the radio.

### CH3508

- It is possible to charge a battery in rear compartment simultaneously with the radio/battery in front.

## Installing the charger

### Mounting the charger

There are several options for mounting one or more chargers on a table or a wall.

For information on dimensions and screw positions, refer *Dimensional drawing, charger* on page 40.



When mounting the charger, make sure it is placed in a dry place and away from direct sunlight. The charger is not waterproof.

### **Connecting to power**

The charger can be supplied from DC or from AC using an AC/DC converter.

**DC:** Connect the 12-24VDC Connection Cable between the DC supply and the connector on the underside of the charger.

**AC:** Connect the AC/DC converter to the connector on the underside of the charger. Then connect the AC/DC converter to the AC outlet.

### **Recharging the battery**

To recharge the battery, place the radio with battery or the battery alone in the front position of the charger cradle.


If the radio cannot turn on due to complete discharged battery, then **turn off** the radio and place it in the charger or charge the battery alone.

The light indicators on the charger cradle show the status as follows:

- Green light: Power is connected to the charger.
- Steady red light: Charging completed. Trickle charge mode.

Charging time with empty battery: UHF off approx. 4 hours, UHF on: approx. 5 hours.

The battery indicator on the radio display indicates if the radio is placed in the charger while radio and charger are both powered.

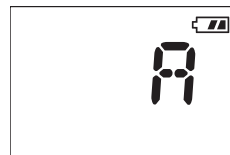

## ***Configuring the radio***

### **Configuration mode**

#### **Entering and using configuration mode**

**Note** | The radio is not operational in configuration mode.

- **To enter** configuration mode, press and hold the **Light/Lock** button while turning on the radio.  
The bottom line of the display shows the current menu item/setting.
- **To exit** configuration mode, turn off the radio or press any key except **▲**, **▼** and the **Light/Lock** button.  
Using the PTT button or leaving the radio inactive for 10 seconds also causes the radio to exit configuration mode.
- **To change** a setting, press **▲** or **▼**.
- **To confirm the current setting** and go to the next menu item, press the **Light/Lock** button.

## List of configuration settings

The following settings are available in configuration mode.

| Name  | Values  | Description                                                                                                                                                                             |
|-------|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LIGHT | MAN     | Only <b>Light/Lock</b> button activates the backlight.                                                                                                                                  |
|       | KEY     | All keys and buttons, except PTT and volume control, activate the backlight.                                                                                                            |
| BEEP  | MAX     | Status click/beep sound on key press, long press (settings/programming saved) and battery alarm. Maximum level.                                                                         |
|       | MIN     | Status click/beep sound on key press, long press (settings/programming saved) and battery alarm. Minimum level.                                                                         |
|       | OFF     | All beeps off.                                                                                                                                                                          |
| VER   | X.XX.XX | Software version. Read-only.                                                                                                                                                            |
| BAT   | X.XX    | Battery voltage (V). Read-only.                                                                                                                                                         |
| TEMP  | XX.X    | Temperature (°C). Read-only.                                                                                                                                                            |
| SLEEP | ON      | Enable sleep mode (to minimize power consumption).<br><br>Sleeps for periods of 1 second after 15 seconds of idle mode. Idle mode is: no signal detected and no operation of the radio. |
|       | OFF     | Disable sleep mode.                                                                                                                                                                     |

| Name    | Values                   | Description                                                                                                                                                   |
|---------|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CONTRST | 1, 2, 3, 4, 5            | Contrast.<br>1 = lowest and 5 = highest.                                                                                                                      |
| SHANG   | OFF                      | Off. Resumes scanning when signal disappears.                                                                                                                 |
|         | 4, 6, 8, 10              | Scan hang time (in seconds) on an active receiving working channel. The time is measured from signal detected - remains on channel even if signal disappears. |
| RESCN   | OFF                      | Automatic resume deactivated.                                                                                                                                 |
|         | 3, 6, 10, 15, 20, 25, 30 | Scanning/watch can be automatically resumed after this time (seconds) if previously terminated with PTT.                                                      |
| SQ      | TIME                     | A long press on SQ opens squelch. The squelch level resumes to setting 3 seconds after SQ is released.                                                        |
|         | MAN                      | A long press on SQ opens squelch. The squelch level resumes to setting as soon SQ is released.                                                                |
| WORK    | ON                       | If the default channel D is selected using the D/P0 key, any push on ▲ or ▼ will select the working channel active before D/P0 was pushed.                    |
|         | OFF                      | If on a distress or call channel, any push on ▲ or ▼ will select the channel next to the displayed channel.                                                   |

## Configuring the radio

| Name | Values | Description                                                                                                                                                                                                                     |
|------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0   | OFF    | Remove tag "P0" for current working channel.                                                                                                                                                                                    |
|      | ON     | Tag current working channel with "P0". If another channel was previously tagged "P0", this is overruled. <ul style="list-style-type: none"> <li>The working channel can now be selected with a long press on "D/P0".</li> </ul> |
| P1   | OFF    | Remove tag "P1" for current working channel.                                                                                                                                                                                    |
|      | ON     | Tag current working channel with "P1". If another channel was previously tagged "P1", this is overruled. <ul style="list-style-type: none"> <li>The working channel can now be selected with a long press on ▼.</li> </ul>      |
| P2   | OFF    | Remove tag "B" for current working channel.                                                                                                                                                                                     |
|      | ON     | Tag current working channel with "P2". If another channel was previously tagged "P2", this is overruled. <ul style="list-style-type: none"> <li>The working channel can now be selected with a long press on ▲.</li> </ul>      |

| Name  | Values        | Description                                                                                                                                                                                                                                                                                                             |
|-------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SUBC  | OFF           | SUBC disabled. Squelch opens on all received signals.                                                                                                                                                                                                                                                                   |
|       | 1, 2, ..., 38 | Sub-tone carrier ID.<br><br>Squelch opens if the received signal contains the desired subtone. During transmission the sub-tone with the corresponding ID is generated.<br><br>Two radios on the same channel and with the same sub-tone ID, can reduce unwanted incoming traffic from other users on the same channel. |
| CTCSS | OFF           | CTCSS disabled.                                                                                                                                                                                                                                                                                                         |
|       | ON            | Activate CTCSS on working channel. Two radios on the same channel and with SUBC enabled, can have a certain level of privacy.<br><br>Note that if you choose this option, the radio immediately exits configuration mode and starts CTCSS on the working channel.                                                       |
| GROUP | SEL           | Selective Mode. Squelch opens only if the programmed sub-tone is received in the signal.                                                                                                                                                                                                                                |
|       | ANY           | Squelch opens on reception of any of the 38 sub-tones.                                                                                                                                                                                                                                                                  |

## Configuring the radio

| Name  | Values            | Description                                                                                                                                                                                                                                                                       |
|-------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SCODE | OFF               | No scrambler code is assigned to the channel (selecting "ON" in the SCRM setting will have no effect).                                                                                                                                                                            |
|       | 1, 2, 3, 4, 5, CC | A selection between 5 fixed sets of scrambler characteristics, and a custom code (CC), can be assigned to the channel.<br><br>Note that the custom code can be defined in the service interface.                                                                                  |
| SCRM  | OFF               | Scrambler disabled.                                                                                                                                                                                                                                                               |
|       | ON                | Activate scrambling on working channel. Two radios on the same channel and with scrambling enabled, can have a certain level of privacy.<br><br>Note that if you choose this option, the radio immediately exits configuration mode and starts scrambling on the working channel. |
| BAND  | 25.0              | Wide band operation selected.                                                                                                                                                                                                                                                     |
| ALIVE | OFF               | Factory default state.                                                                                                                                                                                                                                                            |
|       | ON                | Press ▲ to set "ALIVE" on.                                                                                                                                                                                                                                                        |

| Name     | Values   | Description                                                                                                                                                                                                                                                                                 |
|----------|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ADD NAME | A-Z, 0-9 | <p>Makes it possible to name the channels.</p> <p>The name must contain a maximum of 9 characters, use only capital letters, digits and spaces.</p> <p>Press <b>Light/Lock</b> to confirm programming.</p> <p>Note: The name appears in the service line on the display.</p>                |
| CHRD     | OFF      | Channel read-out disabled - Factory default                                                                                                                                                                                                                                                 |
|          | ON       | <p>Channel read-out enabled</p> <p>Upon channel change the channel name of the new channel will be spoken in a connected headset or speaker-mike.</p> <p>Please note that the channel will not be announced in the speaker of the radio or head-set if the Monitor function is enabled.</p> |

## Configuring the radio

---

## ***Equipment and accessories***

### **External equipment**

#### **List of equipment**

The following equipment can be connected to the radio:

| Equipment                                     | Order number |
|-----------------------------------------------|--------------|
| SAVOX C-C440AV Push-To Talk unit              | 403900-942   |
| SAVOX C-C500 Remote Speaker Microphone        | 403500-944   |
| SAVOX NC/400 Noise-com                        | 403500-003   |
| SAVOX HC-E Helmet-com                         | 403500-004   |
| SAVOX HC-1 Helmet                             | 403500-005   |
| Peltor MT7H79F-50 Headset                     | 403500-006   |
| Peltor MT7H79P3E-50 Headset - Helmet Mount    | 403500-007   |
| Peltor MT1H7F2-07-51 Tactical ATEX - Headband | 403500-008   |
| Peltor MT1H7P3E2-07-51 Tactical ATEX - Helmet | 403500-009   |

We recommend to remove all accessories during emergency use.

All accessories listed might be used when body worn.


## Connecting external equipment

Connect the dedicated interface cable between the external equipment and the top connector on the radio.

| Interface cable                                                 | Order number |
|-----------------------------------------------------------------|--------------|
| SAVOX C-C440AV - for SAVOX PTT unit                             | 403900-942   |
| SAVOX C-C500 - for SAVOX Headset                                | 403500-944   |
| SAVOX C-C500/C-C440AV - for PELTOR headset when using SAVOX PTT | 403900-953   |
| Peltor FL5261B - for Peltor Headset                             | 403900-952   |



When external equipment is connected to the radio, the right side of the display will show a headset.

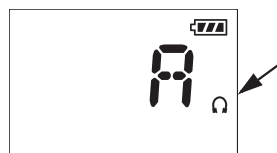


### Impact on radio operation

The external equipment can have a built-in PTT button, speaker and microphone. Thus a connection has per default the following impact on the radio operation:

- If a speaker or earpiece is built into the detected external equipment, the sound device of the external equipment is used, and the internal radio speaker is disabled.
- The external accessory microphone is selected as audio input device, when the external PTT button is pressed. The transceiver microphone is used as audio input device when the transceiver PTT button is pressed.
- This behaviour can be changed in the service tool.

### Accessorie connector

- Pin 1. Loudspeaker,  
minimum 8 ohm impedance.
- Pin 2. Accessory power,  
3.5V maximum 13mA.
- Pin 3. Microphone input,  
 $R_i = 2.2\text{kohm}$ , 3V phantom power.
- Pin 4. GND.

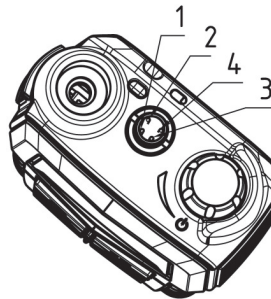

## Accessories

### List of accessories

The following accessories are delivered with your radio:

| Accessory                                            | Order number |
|------------------------------------------------------|--------------|
| ATEX Rechargeable battery, B3906                     | 403906A      |
| ATEX Compact Charger, CH3505                         | 403505A      |
| AC/DC converter, length 150cm (100-240V~ /12VDC out) | 88-125538    |
| 12-24VDC Connection cable, length 150cm              | 37-124381    |
| Belt clip                                            | 62-124320    |
| Antenna                                              | 62-125662    |
| Lanyard                                              | 41-124375    |
| User Manual (this manual)                            |              |

**Batteries, charger, AC/DC Converter** and **12VDC Connection** are described in *Batteries* on page 15.

To mount the **antenna**, simply screw it into the threaded bush at the top of the radio.

Use of **lanyard** is only for hand held operation. Put it around the wrist to prevent dropping the radio.

Accessories you may buy

| Accessory                         | Part number |
|-----------------------------------|-------------|
| ATEX Charger CH3507               | 403507B     |
| ATEX Dual Position Charger CH3508 | 403508B     |
| ATEX Leather Case                 | 403500-207  |

Leather Case




Warning!

The display must always be kept away from the body to reduce the RF exposure when body worn.

### Attaching and removing the belt clip

**To attach** the belt clip, slide the belt clip upwards into the rails at the back of the radio until it locks.

**To remove** the belt clip, press the projection at the top of the belt clip to release the lock and slide the belt clip downwards out of the rails.

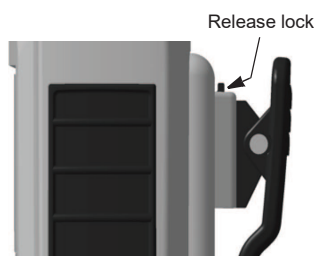

1. Do as follows: Take the lanyard through the eye at the top of the radio.
2. Put one end of the lanyard through the loop at the other end of the lanyard and pull to tighten.



## Troubleshooting

### Displaying errors

Some errors result in an error message in the display. These error messages are listed below.

| Display text     | Problem                                                                                                                                                                                                                                                                                                            | Type                                | Actions                                    |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|--------------------------------------------|
| Err<br>EMPTY BAT | The battery voltage is below a critical level, where further operation would damage the battery.                                                                                                                                                                                                                   | Severe.<br>Radio is non-functional. | Change/recharge the battery.               |
| Err<br>HW ERR    | Hardware error.                                                                                                                                                                                                                                                                                                    | Severe.<br>Radio is non-functional. | Service required.                          |
| ILLEGAL          | Context fails operation. This text will appear on the following occasions: <ul style="list-style-type: none"> <li>Multiple watch is selected in channel regions where it is not allowed.</li> <li>High power is selected on a channel where it is prohibited.</li> <li>Transmission on blocked channels</li> </ul> | Fail operation                      | Consider operation in a different context. |



## Technical specifications

### Technical data SAILOR 3965

#### General

| Item                       | Specification                                                             |
|----------------------------|---------------------------------------------------------------------------|
| RX frequency range         | 457.525 - 457.575 MHz,<br>467.525 - 467.575 MHz                           |
| TX frequency range         | 457.525 - 457.575 MHz,<br>467.525 - 467.575 MHz                           |
| Modulation<br>25 kHz       | 16K0G3E                                                                   |
| Power supply               | 7.4 VDC Li battery                                                        |
| Current drain at 2 W TX    | 1.0 A                                                                     |
| Current drain at 0.4 W TX  | 0.7 A                                                                     |
| Current drain RX max audio | 0.25 A                                                                    |
| Antenna port               | 50 ohm                                                                    |
| Battery                    | 1650 mAh Li-Ion Secondary<br>1650(rechargeable)<br>3000 mAh Li-Fe Primary |
| Operating temperature      | -20°C to +55°C                                                            |
| Water ingress protection   | IP67                                                                      |
| Frequency stability        | Better than $\pm 1.0$ kHz                                                 |
| Weight with battery        | 350g                                                                      |

## Technical specifications

---

### Transmitter

| Item                             | Specification                        |
|----------------------------------|--------------------------------------|
| RF output power, maritime        | 2 W radiated / 0.4 W radiated (EIRP) |
| Max deviation<br>25 kHz          | ±5 kHz                               |
| Spurious emission                | < 0.25 µW                            |
| Adjacent channel power<br>25 kHz | > 70 dB                              |

### Receiver

| Item                                        | Specification                 |
|---------------------------------------------|-------------------------------|
| Sensitivity (20 dB SINAD)                   | -117 dBm typical              |
| Intermodulation<br>EN 300 720<br>EN 300 086 | Better than<br>68 dB<br>65 dB |
| Spurious response                           | > 70 dB                       |
| Adjacent channel selectivity<br>25 kHz      | > 70 dB                       |
| Audio output, internal                      | 0.25 W at 10% dist.           |
| Audio output, external                      | 0.25 W/8 ohm                  |

## Battery life guidelines

### Primary battery (non-rechargeable)

The primary non-rechargeable battery pack is capable of providing sufficient power for the specified 8 hours according to regulations.

The expiry date printed on the battery label is valid when the battery is stored at temperatures below +40°C.

The expiry date will typically be more than 5 years from the purchase date.

Replace the battery at or before this date.

To ensure a long lifetime keep the battery in the store position in the charger and avoid high temperature and direct sunlight.

### Secondary battery (rechargeable)

**Note** | New batteries should be placed in the charger for minimum 12 hours first time.

During daily use, always keep the battery fully charged and away from hot areas.

Keep the battery terminals dry and clean.


Never discharge beyond the specifications of the battery.

Operation/Standby time depends on usage. Generally, the more the radio is transmitting, the faster it will drain the battery. Also, the “Hi” power setting will drain the battery faster than the “Lo” setting.

**Approximate** figures are:


- A battery can be stored for 4 to 6 month at 25°C if charged to 40%.  
The battery will normally last for 5 to 9 hours of use on a fully charged battery.

## Dimensional drawing, transceiver

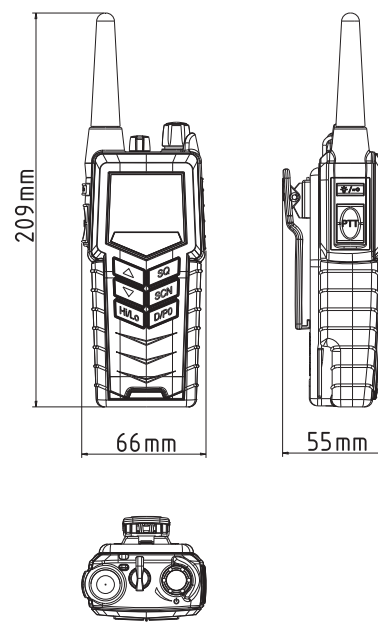

Dimensional drawing, charger


CH3505

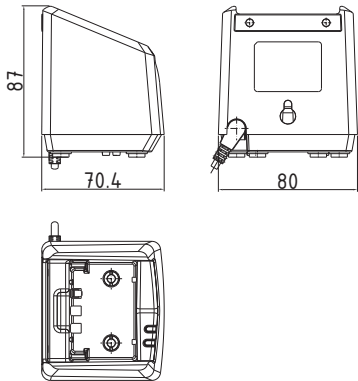

Mounting Possibilities


Desktop mounting, top view

Wall mounting, rear view

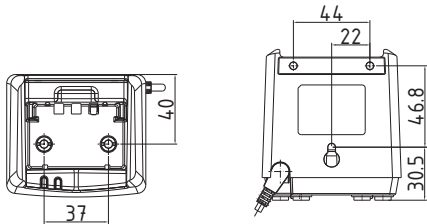

## Technical specifications


### CH3507 and CH3508

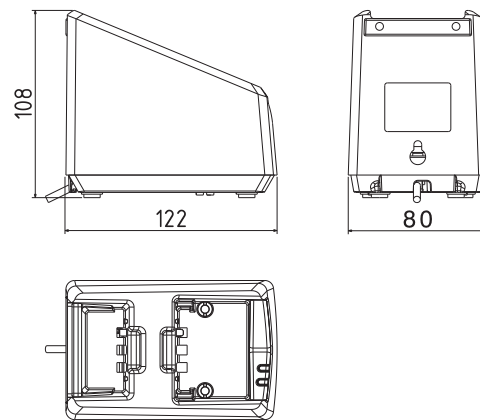

### Mounting Possibilities

Desktop mounting, top view

Wall mounting, rear view

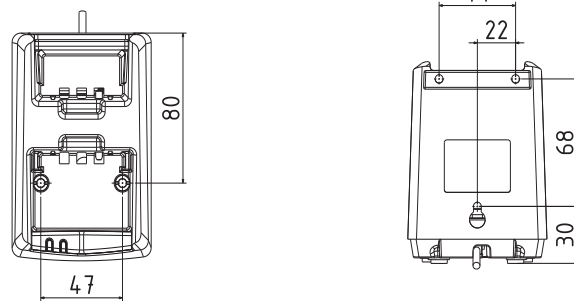

## EU Declaration of Conformity

Thrane & Thrane A/S  
Lundtoftegaardsvej 93 D  
2800 Kgs. Lyngby  
Denmark

### Equipment

| Equipment    |                                       |          |
|--------------|---------------------------------------|----------|
| Model        | Description                           | Part no. |
| TT-3965A     | ATEX Transceiver SAILOR 3965 UHF Fire | 403965A  |
| SAILOR 83906 | ATEX Rechargeable Li-ion Battery      | 403906A  |
| SAILOR 83503 | ATEX Primary Lithium Battery          | 403503A  |
| SAILOR 83504 | ATEX Rechargeable Li-ion Battery      | 403504A  |

| Model         | Description                      | Part no.  |
|---------------|----------------------------------|-----------|
| SAILOR CH3505 | Battery Compact Charger for ATEX | 403505A   |
| SAILOR CH3507 | Battery Charger for ATEX         | 403507B   |
| SAILOR CH3508 | Dual Battery Charger for ATEX    | 403508B   |
|               | AC/DC Adapter                    | 88-125538 |

**Equipment Applicability**  
SAILOR 3965 is a simplex/semi-duplex handheld ATEX / UHF radiotelephone designed for maritime & landmobile communication within the frequency range 440 MHz to 470 MHz.

The requirement with respect to the ATEX Directive 2014/34/EU is met by conforming to the harmonized EU standards EN IEC 60079-0:2018 and EN 60079-11:2012.

SAILOR 3965 meets the ATEX requirement for gas environments of class II 2 G Ex ib IIB T4.  
SAILOR 3965 also meets the requirement for Ingress Protection to the level of IP67.

Certified by:

TÜV NORD    Notified Body Id. No. 0044    Certificate No. TÜV 16 ATEX 179791 X    Issue: 01  
ExVeritas    Notified Body Id. No. 2804    Certificate No. ExVeritas 21PQAN0192

**Place and date**  
Pandrup, 25 October 2021

*Peter Karlan*

Program Director R&D  
Peter Haslev  
Document no.: 99-150089-D

Document no.: 99-150089-D



Throne & Throne A/S trading as Coltham SATCOM, registered no.: DK - 65 72 46 18, Registered address: Lundtoftegaardsvej 93 D, 2800 Kgs. Lyngby, Denmark  
This memo, which may contain confidential information, is intended solely for the use of the individual(s) or organization to whom it is addressed.  
If you are not the addressee, or the employee or agent responsible for delivering this memo to the addressee, please telephone us as soon as possible and  
return the memo to us by post, inperson or unauthorised use, disclosure, distribution or copying of this memo is prohibited.

[www.cpbhamsatcom.com](http://www.cpbhamsatcom.com)

Page 1 of 1

## Technical specifications

**COBHAM**

### EU Declaration of Conformity

Hereby manufacturer,  
Thrane & Thrane A/S  
Lundtoftegaardsvej 93 D  
2800 Kgs. Lyngby  
Denmark

declares that this DoC is issued under sole responsibility and that the following Radio Equipment

| Model    | Description                                                                                              | SW version | Part no. |
|----------|----------------------------------------------------------------------------------------------------------|------------|----------|
| TT-3965A | SAILOR 3965 Portable ATEX UHF radiotelephone.<br>UHF radiotelephone designed for maritime communication. | 3.00.xx    | 403965A  |

with the associated accessories

| Model         | Description                         | Part no.  |
|---------------|-------------------------------------|-----------|
| TT-3906A      | SAILOR 83906 Battery – Rechargeable | 403906A   |
| SAILOR CH3505 | Compact Charger                     | 403505A   |
| SAILOR CH3507 | Single Position Charger             | 403507B   |
| SAILOR CH3508 | Dual Position Charger               | 403508B   |
|               | AC/DC Adapter                       | 88-125538 |

is in conformity with **RED directive 2014/53/EU** with reference to the following standards applied:

- EN 60950-1:2006-A11:2009 + A1:2010 + A12:2011 + A2:2013
- EN 62368-1:2014/AC:2015/A11:2017
- EN 301 843-1, V2.2.1
- EN 301 843-2, V2.2.1
- ETSI EN 300 720, V2.1.1

Nemko has issued Module B certificate 0470-RED-173602.

**Place and date**  
Pandrup, 15 December, 2020

  
Program Director R&D  
Peter Haslev




Document no.: 99-155708-E

Thrane & Thrane A/S trading as Cobham (UK) Ltd, Registered no.: 044 - 02 72 40 06. Registered address: Lundtoftegaardvej 93 D, 2800 Kgs. Lyngby, Denmark.  
The names, which may contain confidential information, is intended solely for the use of the manufacturer or organization to whom it is addressed. If you are not the addressee, or the employee or agent responsible for delivering this message to the addressee, please telephone us as soon as possible and delete this message to the point of transmission or destruction, distribution or copying of this message is prohibited.

[www.cobham.com](http://www.cobham.com)

## Type Examination Certificate

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                           |                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Translation</p> <p>(1) <b>EU-Type Examination Certificate</b></p> <p>(2) Equipment and protective systems intended for use in potentially explosive atmospheres, <b>Directive 2014/34/EU</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                           | <br> |
| (3) Certificate Number                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | TÜV 16 ATEX 179791 X                      | issue: 01                                                                                                                                                                |
| (4) for the product:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Radio transceiver model TT-3965A          |                                                                                                                                                                          |
| (5) of the manufacturer:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>Thrane &amp; Thrane A/S</b>            |                                                                                                                                                                          |
| (6) Address:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Industrivej 30<br>9490 Pandrup<br>Denmark |                                                                                                                                                                          |
| Order number:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 8000465358                                |                                                                                                                                                                          |
| Date of issue:                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 2016-12-13                                |                                                                                                                                                                          |
| <p>(7) The design of this product and any acceptable variation thereto are specified in the schedule to this EU-Type Examination Certificate and the documents therein referred to.</p> <p>(8) The TÜV NORD CERT GmbH, Notified Body No. 0044, in accordance with Article 17 of the Directive 2014/34/EU of the European Parliament and the Council of 26 February 2014, certifies that this product has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of products intended for use in potentially explosive atmospheres given in Annex II to the Directive.<br/>The examination and test results are recorded in the confidential ATEX Assessment Report No. 16 203 189382.</p> <p>(9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:<br/><b>EN 60079-0:2012 + A11:2013 EN 60079-11:2012</b><br/>except in respect of those requirements listed at item 18 of the schedule.</p> <p>(10) If the sign "X" is placed after the certificate number, it indicates that the product is subject to the Specific Conditions for Use specified in the schedule to this certificate.</p> <p>(11) This EU-Type Examination Certificate relates only to the design, and construction of the specified product. Further requirements of the Directive apply to the manufacturing process and supply of this equipment. These are not covered by this certificate.</p> <p>(12) The marking of the product shall include the following:</p> |                                           |                                                                                                                                                                          |
| <p> <b>II 2 G Ex Ib IIB T4</b></p> <p>TÜV NORD CERT GmbH, Langemannstraße 20, 45141 Essen, notified by the central office of the countries for safety engineering (ZLS), Ident. Nr. 0044, legal successor of the TÜV NORD CERT GmbH &amp; Co. KG Ident. Nr. 0032</p> <p>The deputy head of the notified body</p> <p><br/>Christian Röder</p> <p>Hanover office, Am TÜV 1, 30519 Hannover, Tel. +49 511 998-61455, Fax +49 511 998-61590</p> <p><small>This certificate may only be reproduced without any change, schedule included.<br/>Excerpts or changes shall be allowed by the TÜV NORD CERT GmbH</small></p> <p><small>P17-F-011 Rev. 01/04/16</small> <span style="float: right;"><small>page 1/2</small></span></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                           |                                                                                                                                                                          |

Technical specifications



(13) **SCHEDULE**

(14) **EU-Type Examination Certificate No. TÜV 16 ATEX 179791 X issue 01**

(15) **Description of product**

The radio transceiver model TT-3965A is designed in the type of protection "Intrinsic Safety" and is intended for the use onboard ships and on land in classified areas Zone 1 and Zone 2. The radio transceiver is a modified version of the radio transceiver SAILOR SP3560 UHF, which is already separately certified with the EC-Type-Examination Certificate TÜV 08 ATEX 353621 X with associated test report No. 08 203 353521.

The supply can be established either from the secondary battery type B3906, secondary battery B3504 or from the primary battery B3503.

The secondary battery B3906 is a modified version of the secondary battery B3504 with a red instead of the blue housing. The charging is only permitted outside the hazardous area with the associated non-ATEX chargers.

Both the primary and the secondary batteries are designed intrinsically safe and may be changed inside the hazardous area.

The primary battery B3503 and the original secondary battery B3504 are already examined within the afore-mentioned EC-Type-Examination Certificate.

Type key:  
No further type key

Technical data:  
Accessory interface connector.....in type of protection Intrinsic Safety Ex ib IIB  
only for the connection to certified intrinsically safe circuits

|                        |                             |   |     |    |
|------------------------|-----------------------------|---|-----|----|
| Maximum values:        | $U_s$                       | = | 8.4 | V  |
|                        | $I_s$                       | = | 450 | mA |
| Long-term output power | $P_s$                       | = | 1.8 | W  |
|                        | Rectangular characteristics |   |     |    |
|                        | $C_s$                       | = | 150 | nF |
|                        | $L_s$                       | = | 10  | µH |

Permissible range of ambient temperature range:  
-20 °C ≤ T<sub>a</sub> ≤ +55 °C

Approved accessories:

|                |            |
|----------------|------------|
| Charger CH3505 | 403505A    |
| Charger CH3507 | 403507B    |
| Charger CH3508 | 403508B    |
| UHF Antenna    | 88-125662  |
| UHF Antenna    | 62-125662  |
| Lanyard        | 41-124375  |
| Belt clip      | 62-124320  |
| Leather case   | 403500-207 |
| Service cable  | 403500-958 |

page 20



**Schedule to EU-Type Examination Certificate No. TÜV 16 ATEX 179791 X issue 01**

(16) Drawings and documents are listed in the ATEX Assessment Report No. 16 203 189382

(17) Specific Conditions for Use

1. Do not change the battery in wet or humid environments.
2. Always keep battery connectors dry and clean.
3. Use only with ATEX approved accessories.  
Alternatively ATEX approved accessories in compliance with the accessory connector ATEX specification may be used.
4. Do not change accessories in wet or humid environments.
5. Do not charge the battery in hazardous area.
6. For charge of battery use  
Part no: 403505A - ATEX CH3505 Compact Charger,  
Part no: 403507B - ATEX CH3507 Single Position Charger or  
Part no: 403508B - ATEX CH3508 Dual Position Charger
7. Use only battery type SAILOR B3503, B3504 or B3906.
8. Do not use a mechanically damaged radio.
9. Unpacking of the radio and accessories and the removal of the protective film in front of the display window must not take place in the ATEX protected area.

(18) Essential Health and Safety Requirements

no additional ones

- End of Certificate -

page 3/3

## Technical specifications

---

### ***Attention***

#### **Gore-tex Membrane**

To keep the UHF watertight, is it very important that the Gore-Tex membrane under no circumstances must be damaged/covered or removed.

That is, do not remove the Gore-Tex membrane or place any labels in the area.



Attention

---



98-150078-K  
[www.cobham.com/satcom](http://www.cobham.com/satcom)

***COBHAM***