



KYMETA™
MAKING MOBILE GLOBAL™

u8|GO

QUICK START GUIDE



ELEVATED, LATCHED




KICKSTAND LATCH




Secure the kickstand in the latch while elevated.

REMOVE THE u8 GO FROM CASE (OPTIONAL)

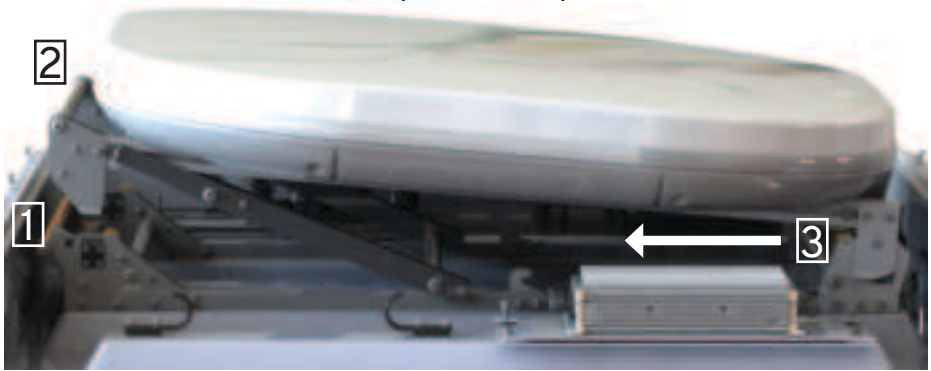

1. Press the latch release bar.
2. Lift the Kymeta™ u8 GO out of the spring latch.
3. Push the u8 GO towards the handle and lift.

BOTTOM LATCH DETAIL

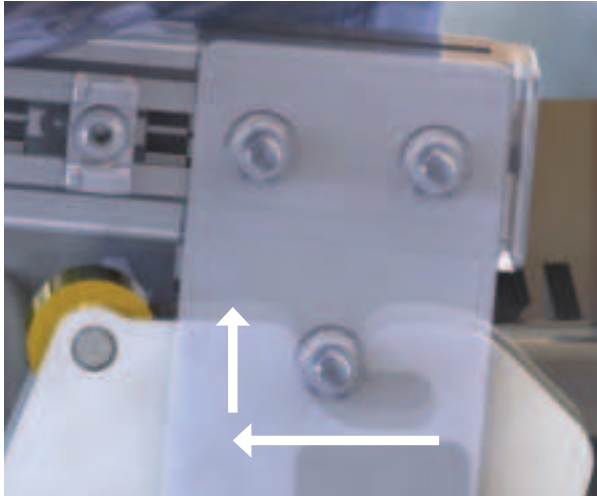



Keep the u8 GO angle low for removal.
The latch won't release if elevated beyond 30°.

KICKSTAND, STOWED




Remove the kickstand when mounting the u8 GO onto a vehicle.

SECURE THE KICKSTAND

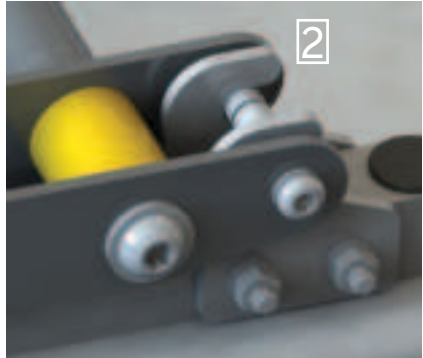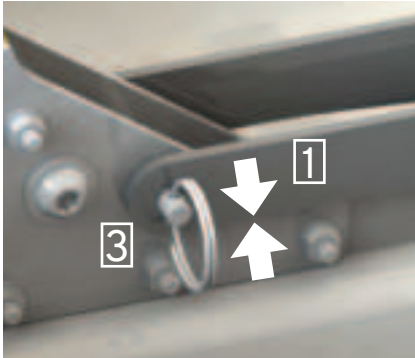

1. Align the kickstand and the base arrows.
2. Latch the kickstand in the base hooks.
3. Secure the kickstand with the pin.


REMOVE YAKIMA MIGHTY MOUNT

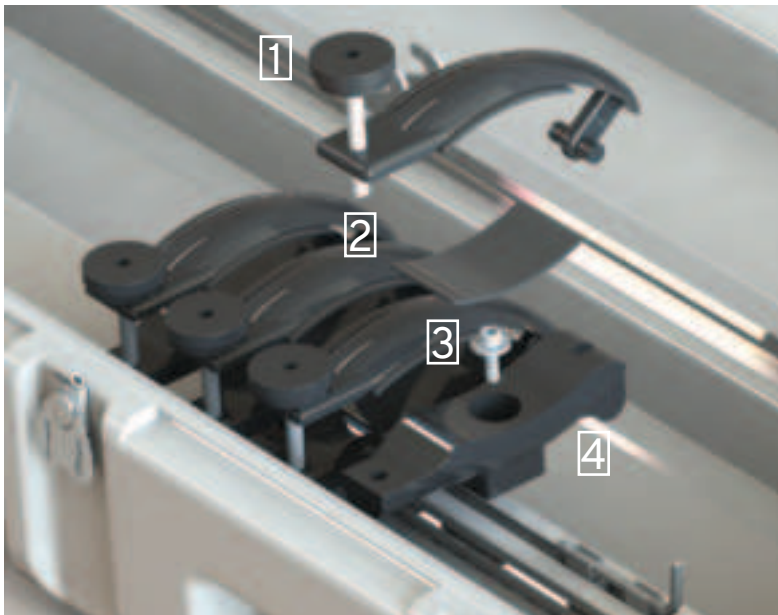

INSTRUCTIONS

1. Loosen the thumb screw and remove the clamp.
2. Lift the lower clamp pad.
3. Loosen the socket head cap screw with the provided Allen wrench.
4. Remove the lower clamp.

INSTALL YAKIMA MIGHTY MOUNT

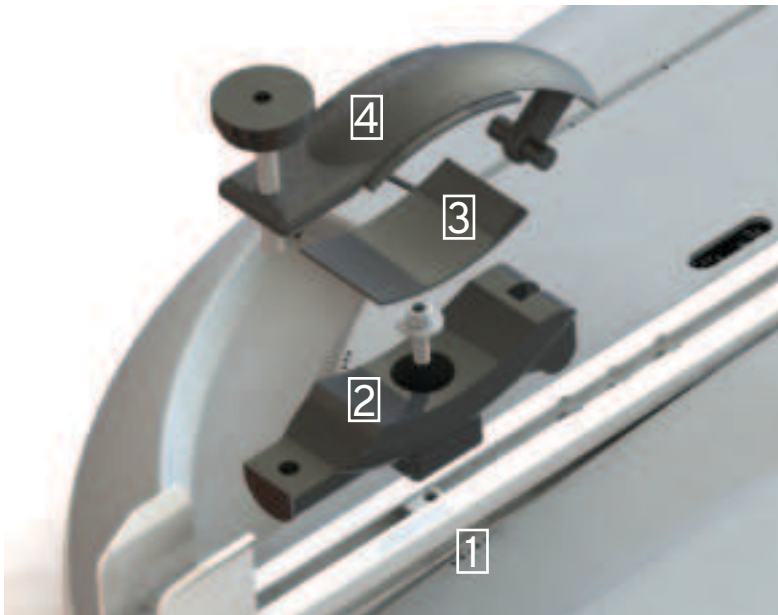

INSTRUCTIONS

1. Align the lower clamp with the T-nut in the aluminum extrusion.
2. Thread the fastener into the T-nut and position the mighty mount on the rail per the vehicle's crossbar spacing.
3. Install the lower clamp pad.
4. Install the upper bail. For sizing guidelines, see *Sizing Process* in the following cards. Refer to the manufacturer's instructions for additional details.

SIZING PROCESS: YAKIMA MIGHTY MOUNT



1. Install the pad on the smaller bail “A” and press to secure.

SIZING PROCESS



2. Attach the bail to the top slot on the clamp base.

SIZING PROCESS



3. Install the mount on the crossbar with the hex bolt facing the direction of vehicle travel. **Use the short bolt with the bail “A” and the long bolt with the bail “B.”**

SIZING PROCESS



1/8" MINIMUM
(NOT TO SCALE)

4. The bolt must protrude 1/8 in. from the bail when installed on the crossbar. If there is not enough thread exposed, move the bail to the bottom slot from step 2.

SIZING PROCESS



5. If the bottom slot doesn't work, install the pad on the bigger bail "B" and repeat steps 2 and 3. Use the long hex bolt with the bail "B."

SIZING PROCESS



6. Attach the knurled wheel to the hex bolt and tighten until the wheel no longer turns. If the mount slides on the crossbar, repeat sizing process.



**For Contact Kymeta customer support at support@kymetacorp.com
or call Kymeta 1-855-525-6638 for urgent issues.**

12277 134th Ct. NE, Redmond, WA 98052 | Phone: 425.896.3700 | www.kymetacorp.com

© 2021 Kymeta Corporation. All Rights Reserved. KYMETA, KYMETA CONNECT, MAKING MOBILE GLOBAL, and CONNECTED BY KYMETA are trademarks of Kymeta Corporation, with registrations or pending applications in the U.S. and/or other countries. All other trademarks are the property of their respective owners.

Document number: 700-00119-000 rev A