


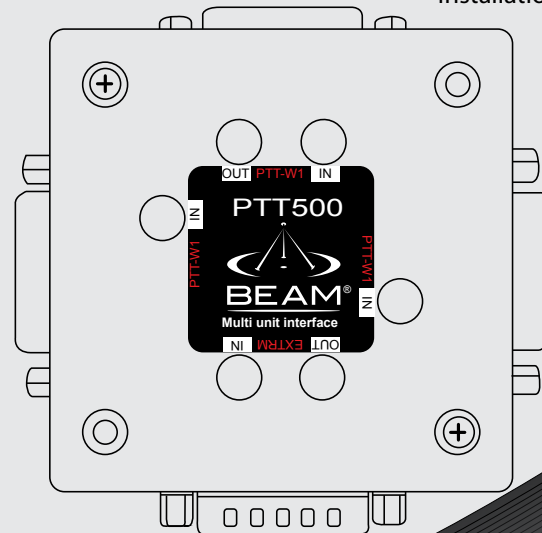

Push-To-Talk Multi Unit Interface Kit

PTT-500

Installation Guide



BEAM Communications

5/8 Anzed Court, Mulgrave
Victoria, 3170, AUSTRALIA

+61 3 8588 4500 +61 3 9560 9055

info@beamcommunications.com

support@beamcommunications.com



www.beamcommunications.com

PART #: USRQSG008701

Push-To-Talk Multi Unit Interface Kit Set Up

Kit Contents

- 1 x PTT-500 Multi Unit Interface
- 3 x PTT-501 Multi Unit Interface Cables
- 1 x PTT-502 Cable
- 1 x Side bracket for Extreme Dock (includes screw, allen key, rear plate)

Set Up

- Connect the RJ45 connector on the PTT-502 cable to the matching port on the base of the DriveDOCK Extreme. Attach the other end (D15 male) to the connector labelled EXTRM on the Multi Unit Interface.
- Connect the RED wire to the same 12VDC power source used to power the DriveDOCK.
- Attach the wireless PTT handsets to the PTT-500 using the included PTT-501 Multi Unit Interface Cables (3)
- If the "find me" function is required, connect the WHITE wire via a normally open switch to +12VDC, otherwise it can be left unconnected.
- An additional side bracket is included to enable a second wireless handset to be mounted beside the DriveDOCK Extreme.

Power

The PTT-500 must be wired separately to a DC source of 10-16VDC only.


Talk Around

Talk around allows users to converse amongst the wireless PTT handsets connected to the Multi Unit Interface without their audio being transmitted over the satellite network. It is activated by pressing the Orange button on the wireless handset instead of the PTT button. All PTT satellite audio will always be heard over the top of a local talk around conversion.

'Find Me' Feature

The PTT-500 Multi Unit Interface also has a 'Find Me' feature. An external switch (not supplied) can be connected to the Multi Unit Interface, that when pressed, will sound a loud tone on each wireless PTT handset. This can be used in the event that a handset gets lost, to alert all handsets of a hazard, or in cases where an unresponsive user needs to be located.

Example of 3 connected wireless PTT handset to the DriveDOCK Extreme.

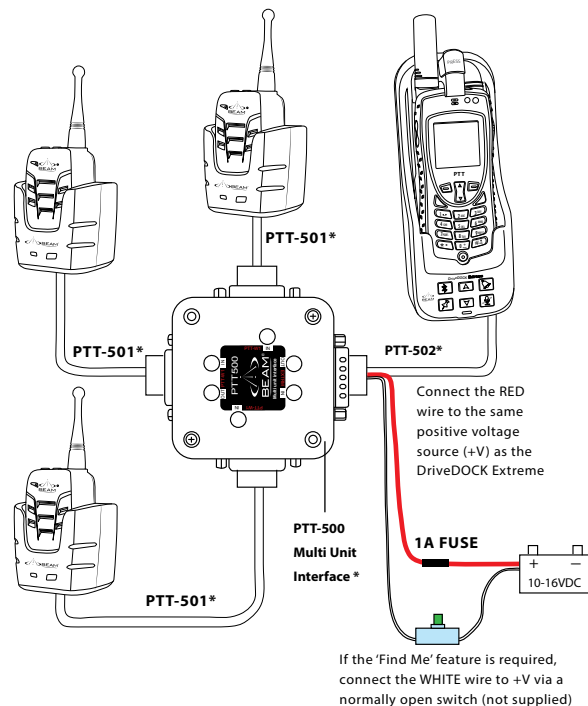

Additional side bracket for Extreme Dock

